
 
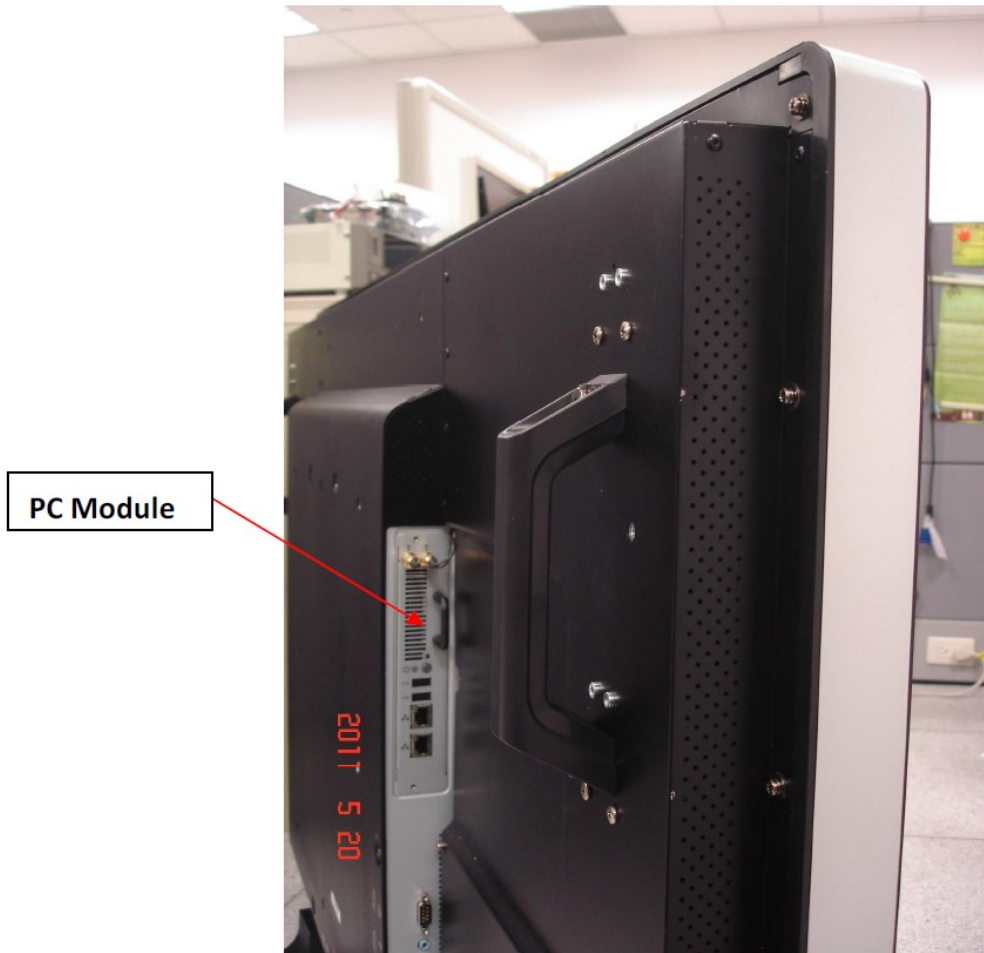


How to remove the PC Module



1. Rotate the two antenna connectors counter clockwise to disconnect them.
2. Using the security allen wrench provided remove the two security screws.

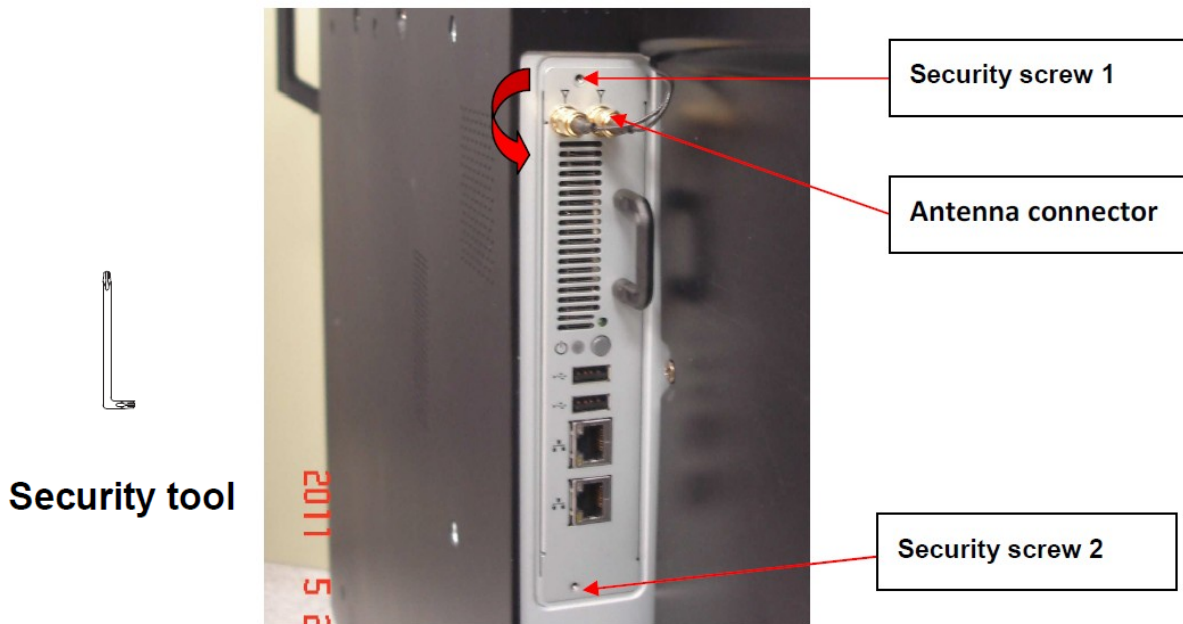

Security tool

3. Use the handle to pull out the PC module

